

▼ ENGINE - ENTIRE GROUP (SYC)

<u>Qty.</u>	<u>NPR</u>	<u>Note</u>	<u>Part No.</u>	<u>Change Level</u>	<u>Req. Qty</u>	<u>Part Name</u>
						<b>FEATURE CODES</b>
		I	C32DE06	F	001	C32, 60HZ, 1800RPM PGS 06
		I	OGNPMK9	F	001	GEN 695 FRAME PM 2 BRG K9
		I	ULLIST	F	001	UL 2200 LISTED PACKAGE GEN SET
		I	EMCP33B	F	001	EMCP 3.3 CONTROL PANEL - B
		I	RPA0150	F	001	692/2B FRAME GEN REML RPA0150
		I	CUSTCNL	F	001	CUSTOMER CONNECTION MTG - LH
		I	AUXPNLR	F	001	AUXILIARY PLATE MOUNTING - RH
		I	EMCSDP1	F	001	DISCRETE I/O (DIO) PACKAGE
		I	PANLGTS	F	001	PANEL LIGHTS
		I	RTDDIOH	F	001	OPTIONAL MODULE HARNESS
		I	CT20006	F	001	CURRENT TRANSF., 2000:5 RATIO
		I	ACLDE15	F	001	AIR CLEANER - DUAL ELEMENT
		I	ELSM248	F	001	STARTING MOTORS - HEAVY DUTY
		I	BTC2416	F	001	CHARGING ALTERNATOR-45AMP
		I	JWHWP08	F	001	JWH WITH PUMP 208/240V
		I	NGRDCNN	F	001	NGRDCNN
		I	RMG1E1R	F	001	CBK UL 3P 1600A 100% LSIG
		I	BUSBL6R	F	001	5000A LV BB REMOVAL-RH (NEMA)
		I	EMPTYPB	F	001	EMPTY ENCLOSURE REAR
		I	EMPTYPL	F	001	EMPTY ENCLOSURE LEFT
		I	BOTCBLR	F	001	BOTTOM CBL ENTRY NO SHROUD STD
		I	CBCONN1	F	001	CIRCUIT BREAKER CONNECTION
		I	EXHMTG1	F	001	MAN AND TURBO GUARDS 01
		S	VIBIS17	F	001	LINEAR SPRING 1.0/1.5G SEISMIC
		I	CERTIFD	F	001	EPA & CARB NON-ROAD EMIS. CERT
		I	UIPBBHS	F	001	CONTROL PANEL MOUNT REAR (STD)
		I	60H-0480	F	001	60HZ 480 VOLTS
		I	MSEPGGN	F	001	GENERAL EPG
		I	SWP0003	F	001	SHRINK WRAP PRO - 3508
		I	TRSGEN1	F	001	GENERATOR TEST REPORT
		I	TRSGEN7	F	001	PGS TEST REPORT @ 0.8 PF
		I	MSCEC72	F	001	COMMERCIAL BUSINESSES
		I	MWCODEF	F	001	STANDBY POWER
		I	LANENGO	F	001	ENGLISH LANGUAGE OPTION

	I	KW01000	F	001	1000 EKW W/FAN
	I	STANDBY	F	001	STANDBY POWER APPLICATION
					<b>PART NUMBERS</b>
	I	GP0621	12	001	C32 1000SC PKG
	IY	<a href="#">253-7904</a>	02	001	GENERAL AR
	<a href="#">NPR</a>	<a href="#">253-7557</a>	14	001	ENGINE AR-COMplete
	<a href="#">NPR</a>	<a href="#">205-7860</a>	07	001	FILM GP
	I	3L-0284		001	*****TEST - PKG GEN SET*****
	<a href="#">NPR</a>	<a href="#">260-0892</a>	06	001	INSTALLATION AR-GENERATOR
	<a href="#">NPR</a>	<a href="#">271-8138</a>	03	001	ADAPTER GP-GENERATOR COUPLING
	I	3L-0467		001	TWO BEARING GEN ALIGNMENT-3500
	I	252-7405	00	001	***** TEST - GEN ELE SYS LE *
	<a href="#">NPR</a>	<a href="#">279-0735</a>	00	001	CABLE GP-BATTERY
	<a href="#">NPR</a>	<a href="#">245-0000</a>	02	001	BOX GP-CONTROL PANEL
	<a href="#">NPR</a>	<a href="#">245-0095</a>	01	001	WIRING GP-GENERATOR
	<a href="#">NPR</a>	<a href="#">245-0082</a>	01	001	CONTROL GP-GENERATOR SET
	<a href="#">NPR</a>	<a href="#">252-7367</a>	00	003	MOUNTING GP-PANEL
	<a href="#">NPR</a>	<a href="#">252-7409</a>	01	001	FASTENER GP-WIRING HARNESS
	<a href="#">NPR</a>	<a href="#">245-0003</a>	04	002	BOX GP-EXTENSION TERMINAL
	<a href="#">NPR</a>	<a href="#">269-7013</a>	02	001	COVER GP-GENERATOR
	<a href="#">NPR</a>	<a href="#">245-0087</a>	04	001	MOUNTING GP-CONTROL PANEL
	<a href="#">NPR</a>	<a href="#">252-7372</a>	00	001	WIRING GP-GENERATOR
	<a href="#">NPR</a>	<a href="#">252-7418</a>	02	001	WIRING GP-GENERATOR
	<a href="#">NPR</a>	<a href="#">252-7556</a>	00	001	COVER GP-CONTROL PANEL
	<a href="#">NPR</a>	<a href="#">252-7411</a>	06	001	GROUND GP-ELECTRICAL
	<a href="#">NPR</a>	<a href="#">245-0001</a>	00	001	COVER GP-CONTROL PANEL
	<a href="#">NPR</a>	<a href="#">245-0013</a>	00	001	COVER GP-GENERATOR
	<a href="#">NPR</a>	<a href="#">245-0007</a>	00	001	COVER GP-GENERATOR
	<a href="#">NPR</a>	<a href="#">245-0023</a>	01	001	COVER GP-CONTROL PANEL
	<a href="#">NPR</a>	<a href="#">245-0027</a>	02	001	COVER GP-ENCLOSURE
	<a href="#">NPR</a>	<a href="#">245-0096</a>	00	002	COVER GP-EXTENSION BOX
	<a href="#">NPR</a>	<a href="#">245-0025</a>	00	002	COVER GP-EXTENSION BOX
	<a href="#">NPR</a>	<a href="#">245-0024</a>	00	001	COVER GP-ENCLOSURE
	I	252-7392	00	001	INSTRUCTIONS
	I	252-7400	01	001	NOTE-BUSS BAR MOUNTING
	<a href="#">NPR</a>	<a href="#">255-3436</a>	10	001	RADIATOR GP
	<a href="#">NPR</a>	I 101-2844	04	029	COOLANT-EXTENDED LIFE
	<a href="#">NPR</a>	<a href="#">270-0453</a>	06	001	LINES GP-AIR
	<a href="#">NPR</a>	<a href="#">261-0653</a>	05	001	LINES GP-COOLANT
	<a href="#">NPR</a>	<a href="#">271-3843</a>	02	001	LINES GP-ENGINE OIL DRAIN

	<a href="#">NPR</a>	IY	<a href="#">271-3840</a>	06	001	LINES GP-FUEL
	<a href="#">NPR</a>	IY	<a href="#">271-3845</a>	03	001	FUMES DISPOSAL GP
	<a href="#">NPR</a>	IY	<a href="#">267-3346</a>	04	001	BASE GP-ENGINE & GENERATOR
		S	5P-2506	00	001	LITERATURE GP
	<a href="#">NPR</a>	IY	<a href="#">275-0030</a>	00	001	COVER GP-ENGINE LIFTING EYE
	<a href="#">NPR</a>	IY	<a href="#">275-0032</a>	00	001	COVER GP-ENGINE LIFTING EYE
	<a href="#">NPR</a>	IY	<a href="#">256-9937</a>	01	001	FAN GP-BLOWER
	<a href="#">NPR</a>	IY	<a href="#">270-1480</a>	00	001	RAIL GP-SLIDE
	<a href="#">NPR</a>	IY	<a href="#">121-3364</a>	02	001	SENSOR & MTG GP-RADIATOR
	<a href="#">NPR</a>	IY	<a href="#">263-1745</a>	00	001	WIRING GP-BOX
	<a href="#">NPR</a>	IY	<a href="#">252-7438</a>	03	001	PLUG GP-BOX
	<a href="#">NPR</a>	IY	<a href="#">281-2747</a>	00	001	HARNESS GP
	<a href="#">NPR</a>	IY	<a href="#">269-4149</a>	02	001	DRIVE GP-FAN
	<a href="#">NPR</a>	IY	<a href="#">295-6925</a>	01	001	BATTERY GP
	<a href="#">NPR</a>	IY	<a href="#">295-6926</a>	00	001	SUPPORT GP-BATTERY
		I	GC4772	00	001	GLOBAL-1000 GENERATOR 695/2
		I	262-8120	00	001	GENERATOR AR
		I	LE0222	04	001	UL-2200 FOR ALL 3500
		I	3L-0028		001	NAMEPLATE
		I	3L-0043		001	GSC + SETPOINT INFORMATION-UL
		I	GZ0699	01	001	EMCP3.3 COMMON ENGINE INTERFAC
	<a href="#">NPR</a>	IY	<a href="#">263-1743</a>	02	001	CONTROL GP-EMCP ELECTRONIC
	<a href="#">NPR</a>	I	254-6368	03	001	ELECTRONICS GP-GENERATOR SET
	<a href="#">NPR</a>	IY	<a href="#">263-1744</a>	03	001	BOX GP-ELECTRONIC
		I	244-9655	01	001	INSTRUCTIONS
		I	GC4775	00	001	1000SC GENERATOR REMOVAL
		I	GC2933	00	001	CUSTOMER CONNECTION
		I	252-7393	00	001	INSTRUCTIONS
		I	GC2937	00	001	Auxiliary Plate Mounting - RH
		I	252-7397	02	001	NOTE-GOVERNER/CONTROL PANEL MT
	<a href="#">NPR</a>	IY	<a href="#">252-7553</a>	00	001	MODULE GP-ALARM
		I	271-4524	00	001	INSTRUCTIONS
	<a href="#">NPR</a>	IY	<a href="#">252-7480</a>	00	001	WIRING GP-GENERATOR
	<a href="#">NPR</a>	SY	<a href="#">252-7504</a>	02	001	CONTROL GP-ELECTRONIC
		I	GC2961	00	001	SPARE DISCRETE I/O PKG
	<a href="#">NPR</a>	IY	<a href="#">252-7347</a>	01	001	WIRING GP-PANEL
		I	GC2991	01	001	PANEL LIGHTS
	<a href="#">NPR</a>	IY	<a href="#">269-7022</a>	00	001	LIGHTING GP-GENERATOR
		I	GC2963	00	001	OPTIONAL MODULE HARNESS
	<a href="#">NPR</a>	IY	<a href="#">252-7362</a>	00	001	WIRING GP-PANEL

	I	GC2900	00	001	Mounting Gp-CT (2000:5)
<a href="#">NPR</a>	IY	<a href="#">252-7329</a>	03	001	TRANSFORMER GP-CURRENT
	I	GP0622	00	001	AIR CLEANER-DUAL ELEMENT
<a href="#">NPR</a>	IY	<a href="#">273-6002</a>	04	001	LINES GP-AIR
	I	GP0939	01	001	ELECTRIC STARTING MOTOR-HEAVY
<a href="#">NPR</a>	IY	<a href="#">261-3291</a>	00	001	STARTING MOTOR GP-ELECTRIC
<a href="#">NPR</a>	IY	<a href="#">260-9520</a>	01	001	WIRING GP-ELECTRIC STARTING
<a href="#">NPR</a>	IY	<a href="#">280-7395</a>	02	001	COVER GP-ENGINE
<a href="#">NPR</a>	ILY	<a href="#">268-3890</a>	03	001	COVER GP-ACCESS
	I	GP0642	00	001	CHARGING ALTERNATOR-45 AMP
<a href="#">NPR</a>	IY	<a href="#">255-3438</a>	05	001	GUARD GP-BELT
<a href="#">NPR</a>	IRY	<a href="#">5N-5692</a>	12	001	ALTERNATOR GP-CHARGING
<a href="#">NPR</a>	IY	<a href="#">256-7170</a>	02	001	MOUNTING GP-ALTERNATOR
<a href="#">NPR</a>	IY	<a href="#">260-9522</a>	03	001	WIRING GP-ELECTRONIC CONTROL
	I	GP0636	02	001	JW HEATER, 9kW, 240/227V
<a href="#">NPR</a>	IY	<a href="#">275-9901</a>	04	001	WIRING GP-JACKET WATER HEATER
<a href="#">NPR</a>	IY	<a href="#">292-2540</a>	01	001	HEATER GP-JACKET WATER
<a href="#">NPR</a>	IY	<a href="#">274-5581</a>	01	001	CABLE GP-GENERATOR GROUND
	I	GC2723	02	001	CBK UL 3P 1600A 100% LSIG
<a href="#">NPR</a>	IY	<a href="#">244-9865</a>	01	001	CIRCUIT BREAKER AS
<a href="#">NPR</a>	IY	<a href="#">252-7476</a>	03	001	PANEL GP-CIRCUIT BREAKER
<a href="#">NPR</a>	IY	<a href="#">252-7598</a>	01	001	BUS BAR GP-CIRCUIT BREAKER
<a href="#">NPR</a>	IY	<a href="#">274-7196</a>	02	001	BUS BAR GP-CIRCUIT BREAKER
<a href="#">NPR</a>	SY	<a href="#">252-7561</a>	00	001	TRANSFORMER AS-CURRENT
<a href="#">NPR</a>	IY	<a href="#">252-7477</a>	01	001	COVER GP-EXTENSION BOX
<a href="#">NPR</a>	IY	<a href="#">252-7643</a>	00	001	COVER GP-CIRCUIT BREAKER
<a href="#">NPR</a>	IY	<a href="#">252-7554</a>	01	001	WIRING GP-PANEL
	I	GC2908	01	001	BUS BAR REMOVAL-RH LOW VOLTAGE
	I	GC2509	01	001	EMPTY ENCLOSURE - REAR
<a href="#">NPR</a>	IY	<a href="#">245-0002</a>	02	001	BOX GP-EXTENSION TERMINAL
<a href="#">NPR</a>	IY	<a href="#">245-0097</a>	00	001	COVER GP-EXTENSION BOX
<a href="#">NPR</a>	IY	<a href="#">245-0026</a>	00	001	COVER GP-EXTENSION BOX
	I	252-7401	02	001	INSTRUCTIONS
<a href="#">NPR</a>	IY	<a href="#">252-7350</a>	00	001	MOUNTING GP-BOX
	I	GC2511	00	001	EMPTY ENCLOSURE LEFT
	I	252-7399	01	001	INSTRUCTIONS-BUS
	I	GC2501	01	001	BOTTOM CBL ENTRY NO SHROUD STD
	I	252-7502	04	001	INSTRUCTIONS
	I	GC3256	02	001	CIRCUIT BREAKER CONNECTION
<a href="#">NPR</a>	IY	<a href="#">273-5807</a>	05	001	CONNECTION GP-ELECTRICAL

	<a href="#">NPR</a>	IY	<a href="#">284-6651</a>	00	001	FILM GP
		I	GP0918	02	001	HEAT SHIELDS - C32
	<a href="#">NPR</a>	IY	<a href="#">278-4176</a>	00	001	SHIELD GP-HEAT
	<a href="#">NPR</a>	IY	<a href="#">286-5296</a>	01	001	SHIELD GP
		I	GP0926	00	001	ISOLATORS
	<a href="#">NPR</a>	SY	<a href="#">286-0397</a>	02	001	MOUNTING GP-VIBRATION ISOLATOR
	<a href="#">NPR</a>	SY	<a href="#">286-0396</a>	02	001	MOUNTING GP-ENGINE FLEXIBLE
		I	5N-9597		001	VOLTAGE INDICATOR 480V, 60HZ
		I	0V-1065		001	END USE: GENERAL EPG
		I	0P-7609		001	SHRINK WRAP PROTECTION - 3508
		I	0P-1530		001	GENERATOR TEST REPORT
		I	0P-1793		001	***GEN SET TEST CHG @ 0.8 PF**
		I	PP5508	00	001	1502 BHP 1042 GEN KW WOF 60 HZ
		I	0K-6255		001	1120 BKW (1502 BHP) @ 1800 RPM
		I	CA0866	07	001	LANGUAGE MARKINGS-ENGLISH <b>SHIPPED LOOSE</b>
		S			006	PACK IN CARTON ONLY INFO(A)
		S	ESO		001	(PRNT ESO COPY)
		S	PML		001	*REQUIRED DECALS
		S	5P-2506		001	LITERATURE GP
		SY	<a href="#">6L-4502</a>		001	CHART-PLATE & FILM
	<a href="#">NPR</a>	S	7F-3400		001	BAG-POLYETHYLENE
	<a href="#">NPR</a>	SY	<a href="#">252-7504</a>		001	CONTROL GP-ELECTRONIC
	<a href="#">NPR</a>	SY	<a href="#">252-7561</a>		001	TRANSFORMER AS-CURRENT PLATE AS
	<a href="#">NPR</a>	S	279-8915		002	
	<a href="#">NPR</a>	SY	<a href="#">286-0396</a>		001	MOUNTING GP-ENGINE FLEXIBLE
	<a href="#">NPR</a>	SY	<a href="#">286-0397</a>		001	MOUNTING GP-VIBRATION ISOLATOR
	<a href="#">NPR</a>	S	286-0657		002	MOUNT AS
		S	SEBP4326		001	PTSBK
		S	SEBU6251		001	LUBE 140019B2(A)
		S	SEBU8088		001	OMM
		S	SELF5397		001	WARRANTY
		S	SERP4326		001	PTSCD