

**3512B Gen Set Engine**

Engine Serial Number - 4AW00295

Engine Build Date - 1998/07/01

**Engine - Entire Group (4AW00295)**

Part Number	Change Level	Part Name
<a href="#">133-9940</a> I	03	Engine AR
<a href="#">2W-7871</a> I	02	Flange GP-Exhaust
<a href="#">4P-5426</a> I	09	Housing GP-Front
<a href="#">4W-2767</a> I	00	Contactora GP
<a href="#">5N-2438</a> I	05	Lines GP-Flexible Fuel
<a href="#">5N-2457</a> I	03	Fitting GP-Exhaust
<a href="#">7C-0330</a> I	04	Control GP-Air Starting
<a href="#">7C-3371</a> I	00	Starting Motor GP-Air
<a href="#">7E-6469</a> I	02	Mounting GP-Contactora
<a href="#">7N-6782</a> I	07	Indicator GP-Air Filter Change
<a href="#">7N-6967</a> I	05	Fitting GP-Exhaust
<a href="#">7W-9269</a> I	03	Lines GP-Air Starting
<a href="#">8N-9303</a> I	06	Air Cleaner GP
<a href="#">8N-9639</a> I	04	Guard GP-Damper
<a href="#">9Y-0848</a> I	01	Rail GP-Engine Support
<a href="#">112-6597</a> I	02	Silencer GP-Air Starting
<a href="#">112-8106</a> I	01	Cover GP-Front Housing

Part Number	Change Level	Part Name
<a href="#">107-2855</a> I	04	Mounting GP-Instrument Panel
<a href="#">125-7089</a> I	05	Box GP-Instrument Panel
<a href="#">131-4349</a> I	01	Wiring GP-Engine
<a href="#">7W-9828</a> I	00	Adapter GP-Air Cleaner
<a href="#">2W-5616</a> I	04	Cover GP-Oil Pan
<a href="#">3N-8647</a> I	04	Fastener GP-Coupling
<a href="#">3N-5765</a> I	06	Guard GP-Coupling
<a href="#">3N-5764</a> I	02	Guard GP-Extension
<a href="#">5N-3765</a> I	10	Coupling GP-Flexible
<a href="#">4P-9064</a> I	00	Guard GP-Extension
<a href="#">3N-5596</a> I	06	Hub-Flexible Coupling
<a href="#">7N-7660</a> I	06	Drive GP-Fan
<a href="#">8N-6564</a> I	04	Pulley AS-Crankshaft
155-0725 I	00	Lines GP-Turbocharger Oil
<a href="#">7N-8640</a> I, L	08	Lines GP-Turbocharger Oil
0S-1571 S		Bolt
0S-1588 S		Bolt
0S-1589 S		Bolt
0S-1591 S		Bolt
0S-1594 S		Bolt

Part Number	Change Level	Part Name
3L-9689 <b>S</b>		Washer
<a href="#">3N-5596</a> <b>S</b>		Hub-Flexible Coupling
3N-5708 <b>S</b>		Guard AS-Extension
3N-6504 <b>S</b>		Hose AS
3N-6666 <b>S</b>		Coupling-Drive
3V-3308 <b>S</b>		Washer-Hard
4B-4280 <b>S</b>		Washer
4D-3704 <b>S</b>		Washer-Hard
4M-6953 <b>S</b>		Washer-Hard
4P-9063 <b>S</b>		Guard AS-Extension
4V-8198 <b>S</b>		Spacer
5F-5990 <b>S</b>		Clip
5L-3773 <b>S</b>		Gasket-Exhaust Elbow
5L-4398 <b>S</b>		Bolt
5N-3272 <b>S</b>		Boot-Rubber Coupling
5N-3274 <b>S</b>		Plate
5N-3284 <b>S</b>		Coupling-Outer
5N-4817 <b>S</b>		Guard AS-Coupling
5N-5561 <b>S</b>		Lubricant-Silicone
5N-7830 <b>S</b>		Gasket

<b>Part Number</b>	<b>Change Level</b>	<b>Part Name</b>
9L-9132 <b>S</b>		Washer
9M-1974 <b>S</b>		Washer-Hard
9S-8752 <b>S</b>		Nut-Full
9X-8872 <b>S</b>		Bolt-Locking
031-4155 <b>S</b>		Locknut

**I - Installed**

**L - Less Indicator**

**S - Shipped Loose**