

▼ ENGINE - ENTIRE GROUP (1HZ)

<u>Qty.</u>	<u>NPR</u>	<u>Note</u>	<u>Part No.</u>	<u>Change Level</u>	<u>Req. Qty</u>	<u>Part Name</u>
						<b>FEATURE CODES</b>
		I	KW01825	F	001	1825 EKW W/FAN
		I	194-2036	F	001	CONT GP - SWITCHGEAR
		I	204-1134	F	001	PANEL AR-AUX
	<u>NPR</u>	ILY	<u>151-5673</u>	F	001	CONNECTION GP-ELECTRICAL
	<u>NPR</u>	IY	<u>202-7903</u>	F	001	CONDUIT GP-ELECTRICAL
	<u>NPR</u>	IY	<u>206-7055</u>	F	001	CONNECTION GP-GENERATOR LEADS
		I	516DE16	F	001	3516B POWER MODULE
		I	ELEBLCA	F	001	BOTTOM LOAD CABLE ACCESS
		I	ELE120L	F	001	120 VAC INTERIOR LIGHTS
		I	MNT403A	F	001	UNDERCARRIAGE AR.-40 FT-3 AXLE
		I	GENLADR	F	001	LADDER
		I	FULEXFF	F	001	EXTERIOR FUEL FILL
		I	FULTRS5	F	001	1250 GAL DW FUEL TRANSFER SYS
		I	CCM0004	F	001	CUST COMMUNICATIONS MODULE-CCM
		I	PROFIRX	F	001	FIRE EXTINGUISHERS
		I	PRIPUS	F	001	PRIME PLUS 10% POWER APPL.
		I	DECRPOW	F	001	RENTAL POWER DECAL
		I	LUBOMU3	F	001	LUBE OIL MAKE-UP SYSTEM
		I	SGRUGS2	F	001	UTILITY GRADE SWITCHGEAR
		I	MSEPGGN	F	001	GENERAL EPG
		I	60H-0480	F	001	60HZ 480 VOLTS
		I	CERTIFD	F	001	EPA & CARB NON-ROAD EMIS. CERT
		I	SOUNDAT	F	001	SOUND ATTENUATED
		I	XQRENTL	F	001	XQ RENTAL POWER
						<b>PART NUMBERS</b>
		I	GG0001	01	001	2628 BHP 1825 GEN KW W/F 60 HZ
		I	0P-9583		001	0P9583 PSD10EPGTERMSPGM10-00
		I	207-7356	00	001	INSTRUCTIONS - SWGR
	<u>NPR</u>	IY	<u>203-8340</u>	01	001	CONTROL GP-MOTOR STARTER
		I	194-1581	00	001	RELAY GP - POWER
		I	193-4621	02	001	PANEL AR
		I	183-8050	01	001	PANEL GP-CONTROL
	<u>NPR</u>	I	183-8051	04	001	PANEL GP-ELECTRONIC
		IY	<u>197-7161</u>	01	001	PANEL AR-SWITCHGEAR

	I	205-8203	01	001	PANEL CIRCUIT GP
	<a href="#">NPR</a>	IY <a href="#">122-6590</a>	01	003	TRANSFORMER AS-CURRENT
	<a href="#">NPR</a>	ILY <a href="#">178-3323</a>	03	002	BATTERY GP
	<a href="#">NPR</a>	IY <a href="#">205-6513</a>	00	001	HARNESS AS-ENGINE
	<a href="#">NPR</a>	IY <a href="#">206-1236</a>	01	001	BATTERY GP
	I	LA3460	05	001	3516B POWER MODULE.
	IY	<a href="#">188-7945</a>	00	001	GENERAL AR
	I	3L-0414		001	SINGLE BEARING GEN ALIGN-3500
	I	3L-0456		001	PROCEDURE - DVR PROG AND TEST
	<a href="#">NPR</a>	IY <a href="#">3N-4905</a>	03	001	HOSE AS
	<a href="#">NPR</a>	IY <a href="#">4P-7072</a>	00	001	CONNECTION GP-WATER
	<a href="#">NPR</a>	I 5N-2438	05	001	LINES GP-FLEXIBLE FUEL
	I	5N-9955		001	JWH CONN IND - 120V, 60HZ
	I	5P-2506	00	001	LITERATURE GP
	<a href="#">NPR</a>	I 5P-2586	03	001	OIL
	<a href="#">NPR</a>	IY <a href="#">7C-0527</a>	02	001	STARTING MOTOR GP-ELECTRIC
	<a href="#">NPR</a>	IY <a href="#">7E-2858</a>	00	001	ALTERNATOR GP-CHARGING
	<a href="#">NPR</a>	IY <a href="#">7E-4836</a>	05	001	MOUNTING GP-ALTERNATOR
	<a href="#">NPR</a>	IY <a href="#">7E-6247</a>	03	001	HEATER GP-JACKET WATER
	<a href="#">NPR</a>	IY <a href="#">7N-6782</a>	08	001	INDICATOR GP-AIR FILTER CHANGE
	<a href="#">NPR</a>	IY <a href="#">7W-5780</a>	04	001	GUARD GP-BELT
	<a href="#">NPR</a>	IY <a href="#">7W-9704</a>	06	001	PUMP GP-SUMP
	<a href="#">NPR</a>	IY <a href="#">8N-9639</a>	04	001	GUARD GP-DAMPER
	<a href="#">NPR</a>	IY <a href="#">107-7361</a>	01	001	DRIVE GP-ACCESSORY
	<a href="#">NPR</a>	IY <a href="#">113-1581</a>	00	001	AIR CLEANER GP
	<a href="#">NPR</a>	IY <a href="#">115-1065</a>	02	001	PUMP GP-FUEL PRIMING
	<a href="#">NPR</a>	IY <a href="#">115-3613</a>	04	001	MOUNTING GP-AIR CLEANER
	<a href="#">NPR</a>	IY <a href="#">115-7841</a>	13	001	FILTER GP-ENGINE OIL
	<a href="#">NPR</a>	IY <a href="#">115-7842</a>	06	001	FILTER GP-FUEL
	<a href="#">NPR</a>	IY <a href="#">116-7004</a>	02	001	REGULATOR GP-TEMPERATURE
	<a href="#">NPR</a>	IY <a href="#">121-8856</a>	07	001	CONNECTION GP-ELECTRICAL
	<a href="#">NPR</a>	IY <a href="#">125-9326</a>	01	001	TRANSFORMER GP-POTENTIAL
	<a href="#">NPR</a>	IY <a href="#">129-4337</a>	06	001	CONTROL GP-EMCP ELECTRONIC
	<a href="#">NPR</a>	IY <a href="#">130-5653</a>	03	001	PANEL GP-CONTROL
	<a href="#">NPR</a>	IY <a href="#">131-2837</a>	03	001	PANEL GP-CONTROL
	<a href="#">NPR</a>	IY <a href="#">131-2960</a>	02	001	RELAY GP
	<a href="#">NPR</a>	IY <a href="#">134-0061</a>	04	001	WIRING GP-ENGINE
	<a href="#">NPR</a>	IY <a href="#">134-3159</a>	04	001	MOUNTING GP-JACKET WTR HEATER
	<a href="#">NPR</a>	IY <a href="#">134-3160</a>	04	001	MOUNTING GP-JACKET WTR HEATER
	<a href="#">NPR</a>	IY <a href="#">135-3319</a>	03	001	BATTERY CHARGER GP

	<a href="#">NPR</a>	IY	<a href="#">136-2054</a>	02	001	MODULE GP-ALARM
	<a href="#">NPR</a>	IY	<a href="#">140-2665</a>	01	001	FUMES DISPOSAL GP
	<a href="#">NPR</a>	IY	<a href="#">141-1598</a>	01	001	SWITCH GP-DISCONNECT
	<a href="#">NPR</a>	IY	<a href="#">141-1809</a>	02	001	BOX GP-GENERATOR CONNECTION
	<a href="#">NPR</a>	IY	<a href="#">141-6413</a>	00	001	RAIL GP-SLIDE
	<a href="#">NPR</a>	IY	<a href="#">144-1952</a>	01	001	GENERATOR AR
	<a href="#">NPR</a>	IY	<a href="#">145-2911</a>	05	001	BOX GP-CONTROL PANEL
	<a href="#">NPR</a>	IY	<a href="#">147-1165</a>	10	001	SWITCHGEAR AR
	<a href="#">NPR</a>	IY	<a href="#">149-2477</a>	00	001	SUPPORT AS
	<a href="#">NPR</a>	IY	<a href="#">149-8779</a>	02	001	HEATER GP-SPACE
	<a href="#">NPR</a>	IY	<a href="#">151-9265</a>	01	001	HARNESS AS-SENSOR
	<a href="#">NPR</a>	IY	<a href="#">151-9266</a>	03	001	HARNESS AS-SENSOR
	<a href="#">NPR</a>	IY	<a href="#">152-2876</a>	02	001	HARNESS AS-WIRING
	<a href="#">NPR</a>	IY	<a href="#">153-0180</a>	01	001	VENT GP-FUEL TANK
	<a href="#">NPR</a>	IY	<a href="#">153-0191</a>	05	001	INSTALLATION AR-GENERATOR
	<a href="#">NPR</a>	IY	<a href="#">153-7726</a>	03	001	CONTROL GP-LOAD SHARE MODULE
	<a href="#">NPR</a>	IY	<a href="#">155-1390</a>	01	001	MOUNTING GP-ENGINE
	<a href="#">NPR</a>	IY	<a href="#">155-1701</a>	01	001	MOUNTING GP-POWER MODULE
	<a href="#">NPR</a>	IY	<a href="#">161-2491</a>	01	001	RAIL GP-ENGINE SUPPORT
	<a href="#">NPR</a>	IY	<a href="#">170-6481</a>	00	001	PANEL GP-CONTROL
	<a href="#">NPR</a>	IY	<a href="#">178-9030</a>	01	001	BOX AS-STORAGE
		I	179-2318	00	001	HARNESS AS
		I	179-7264	00	001	PACKAGING ARRANGEMENT
	<a href="#">NPR</a>	IY	<a href="#">183-1201</a>	03	001	MUFFLER GP
	<a href="#">NPR</a>	IY	<a href="#">192-0788</a>	01	001	DRAIN GP-COOLANT
	<a href="#">NPR</a>	IY	<a href="#">145-5138</a>	01	001	WIRING GP-ELECTRONIC CONTROL
	<a href="#">NPR</a>	IY	<a href="#">197-3887</a>	01	001	MOUNTING GP-ENGINE OIL FILTER
	<a href="#">NPR</a>	IY	<a href="#">202-8640</a>	00	001	DRAIN GP-ENGINE OIL
	<a href="#">NPR</a>	I	119-5148	01	001	COOLANT-EXTENDED LIFE
	<a href="#">NPR</a>	IY	<a href="#">192-4902</a>	02	001	PANEL GP-SOUND SUPPRESSION
	<a href="#">NPR</a>	IY	<a href="#">163-1462</a>	00	001	SENSOR & MTG GP-ELECTRIC
	<a href="#">NPR</a>	IY	<a href="#">187-9703</a>	03	001	RADIATOR GP
		I	198-1905	00	001	PAINT
	<a href="#">NPR</a>	IY	<a href="#">188-1765</a>	02	001	CONTAINER AR
		I	188-3222	00	001	LINES GP-WATER
	<a href="#">NPR</a>	IY	<a href="#">189-6425</a>	01	001	LOUVER GP
	<a href="#">NPR</a>	I	202-0836	00	001	PANEL GP-ENCLOSURE
	<a href="#">NPR</a>	IY	<a href="#">205-7860</a>	00	001	FILM GP
	<a href="#">NPR</a>	IRY	<a href="#">188-9442</a>	01	001	ENGINE AR
	<a href="#">NPR</a>	IY	<a href="#">202-1295</a>	00	001	LOUVER GP

	<a href="#">NPR</a>	IY	<a href="#">189-9100</a>	03	001	MOUNTING GP-RADIATOR
	<a href="#">NPR</a>	IY	<a href="#">190-0376</a>	02	001	LINES GP-VENT
	<a href="#">NPR</a>	IY	<a href="#">190-1328</a>	01	001	BAFFLE GP-RADIATOR
	<a href="#">NPR</a>	I	190-2280	01	001	SUPPORT GP-WATER LINES
		I	LA3486	00	001	BOTTOM LOAD CABLE ACCESS
	<a href="#">NPR</a>	IY	<a href="#">113-1217</a>	00	001	DOOR AS
		I	LA3484	00	001	120 VAC INTERIOR LIGHTS
	<a href="#">NPR</a>	IY	<a href="#">131-5025</a>	02	001	LIGHTING GP-GENERATOR
		I	LA2990	04	001	UNDERCARRIAGE AR-40 FT-3 AXLE
		I	9Y-1385	02	001	UNDERCARRIAGE AR
	<a href="#">NPR</a>	IY	<a href="#">9Y-1392</a>	02	001	JACK
	<a href="#">NPR</a>	IY	<a href="#">151-5714</a>	00	001	LADDER GP
	<a href="#">NPR</a>	IY	<a href="#">156-9155</a>	01	001	HANDLE AS
		I	LA3489	00	001	EXTRA LADDER
		I	LA3493	00	001	EXTERIOR FUEL FILL
	<a href="#">NPR</a>	IY	<a href="#">164-4580</a>	02	001	DOOR AS
		I	LE2000	01	001	DOUBLE WALL 1250 GALLON FUEL T
	<a href="#">NPR</a>	IY	<a href="#">146-9839</a>	08	001	PANEL GP-CONTROL
	<a href="#">NPR</a>	IY	<a href="#">147-5690</a>	03	001	TANK GP-FUEL
		I	LA1264	03	001	REMOTE COMMUNICATIONS OPTION
	<a href="#">NPR</a>	IY	<a href="#">131-0487</a>	03	001	CONTROL GP-EMCP ELECTRONIC
		I	LA3499	00	001	FIRE EXTINGUISHERS
	<a href="#">NPR</a>	IY	<a href="#">102-6818</a>	02	001	FIRE EXTINGUISHER GP
		I	9Y-8163		001	PRIME + 10% POWER APPLICATION
		I	LA2977	01	001	RENTAL POWER DECALS
		I	142-2386	01	001	PLATE & FILM GP
		I	121-4713	00	001	INSTRUCTIONS
		I	LA3468	00	001	LUBE OIL MAKEUP SYSTEM
	<a href="#">NPR</a>	IY	<a href="#">5N-4659</a>	07	001	REGULATOR GP-OIL LEVEL
	<a href="#">NPR</a>	IY	<a href="#">102-6845</a>	03	001	TANK GP-ENGINE OIL
		I	102-6848	00	001	ALARM GP-LOW OIL LEVEL
		I	LA3535	02	001	3000A, 480V UTILITY GRADE UPGR
	<a href="#">NPR</a>	IY	<a href="#">121-6203</a>	06	001	REGULATOR GP-VOLTAGE
	<a href="#">NPR</a>	IY	<a href="#">125-9976</a>	00	001	RELAY GP
	<a href="#">NPR</a>	IY	<a href="#">129-3164</a>	03	001	ENCLOSURE GP-EXTENSION
	<a href="#">NPR</a>	IY	<a href="#">131-0341</a>	01	001	METER GP-POWER FACTOR
	<a href="#">NPR</a>	IY	<a href="#">136-4703</a>	00	001	MOUNTING GP-CIRCUIT BREAKER
	<a href="#">NPR</a>	IY	<a href="#">136-6168</a>	02	001	PANEL AR-UTILITY
	<a href="#">NPR</a>	IY	<a href="#">147-1186</a>	01	001	CONTROL GP-CIRCUIT BREAKER
	<a href="#">NPR</a>	IY	<a href="#">147-1190</a>	01	001	PARALLELING GP-AUTOMATIC

	<u>NPR</u>	IY	<u>149-8781</u>	02	001	HEATER GP-SPACE
		I	172-5645	08	001	PANEL GP
		I	190-6718	00	001	GANEL GP (VPAP)
		I	196-7263	01	001	DIMENSIONS-GENERAL
		I	196-7266	02	001	INSTRUCTIONS
	<u>NPR</u>	IY	<u>178-6325</u>	01	001	MOUNTING GP-VIBRATION ISOLATOR
		I	0V-1065		001	END USE: GENERAL EPG
		I	5N-9597		001	VOLTAGE INDICATOR 480V, 60HZ
		I	GG0001	01	001	2628 BHP 1825 GEN KW W/F 60 HZ
		I	5N-9635		001	CONVENIENCE NUM
		I	0K-2944		001	1960 BKW (2628 BHP) @ 1800 RPM
		I	0V-1546		001	01JUL01 PRC PROT PGM641-12